


- 1) Start Thonny
- 2) Connect to microPython on microcontroller

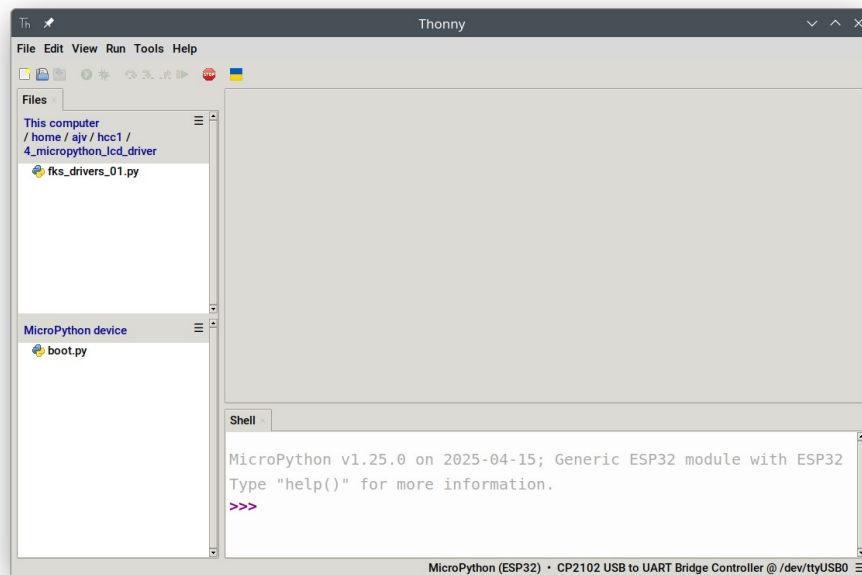

See in the bottom-right corner “MicroPython (ESP32)”
See in bottom-left MicroPython device file system

See in top left host file system the driver file
Right click the driver file | Upload to \

