



test_lcd_driver.odt

2025-05-05

connect SCL from LCD with SCL from ESP32 (brown)
connect SDA from LCD with SDA from ESP32 (red)

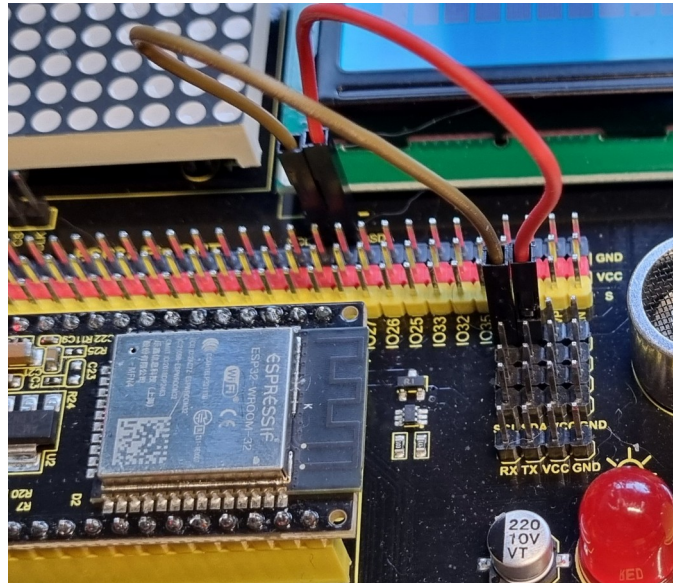

Open Thonny and run script:

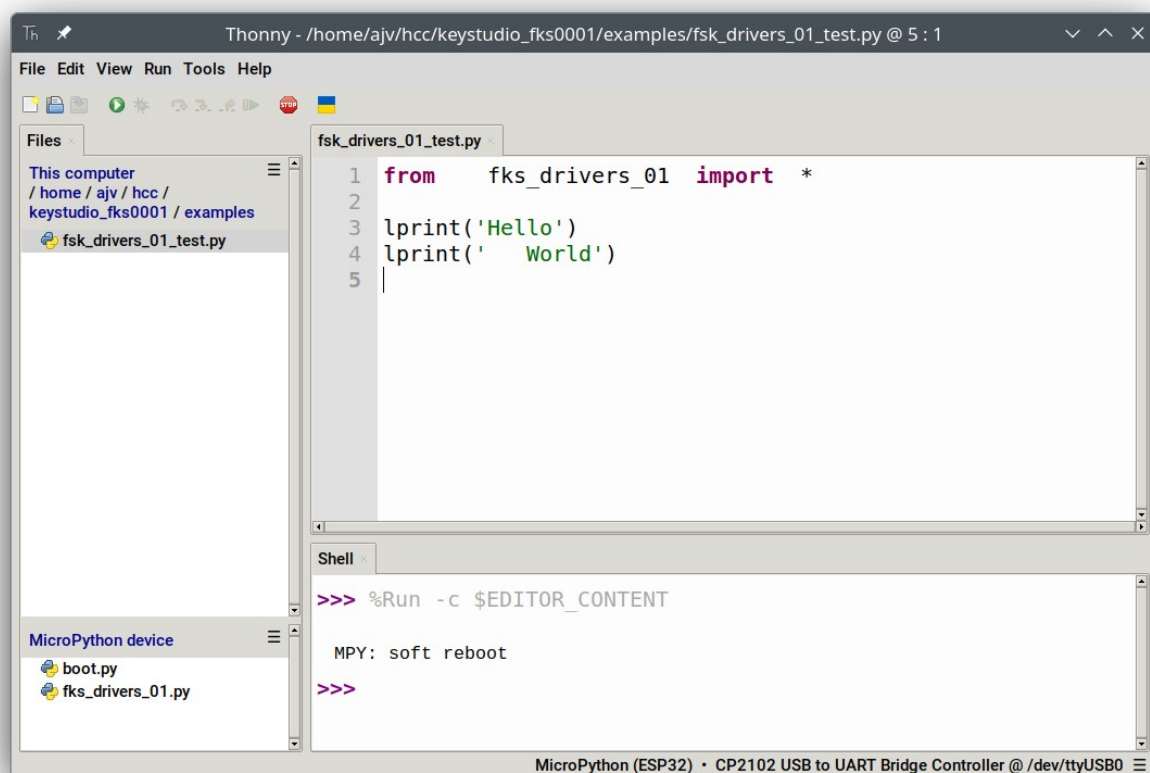

see:



Remarks:

Set switch LCD Switch above LCD in the ON position
Adjust potentiometer LCD Backlight for best contrast